


Nyx300: Wireless Settings



**NOTE:** Your new router is compatible with any Operating System, it only requires a browser to access the configuration website. (IE, Firefox, Opera, Chrome, Safari, etc).



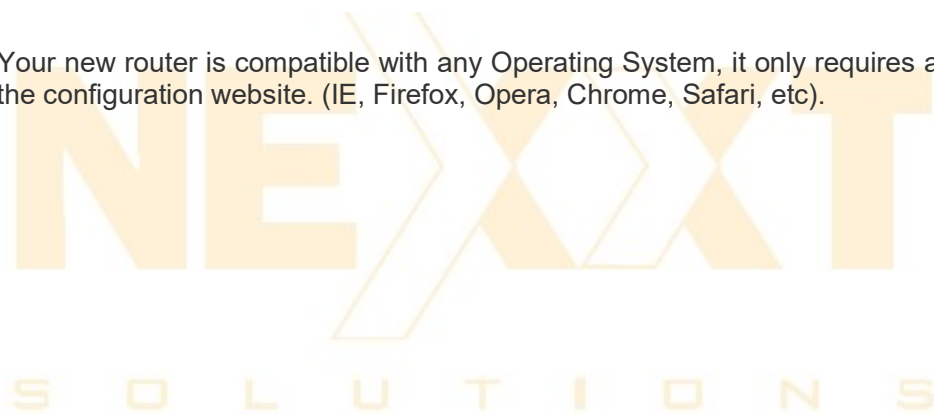

**Recommendations:** We recommend to work with the Nyx300 stand-alone. This is because sometimes the PC or Laptop are connected to a Wireless Signal or via LAN to the main router or modem. If you are using a Laptop or PC with Wi-Fi signal, please disable the Wi-Fi or turned Off. This article will set up the Nyx300 via Ethernet cable.

**Requirements:**

- PC or Laptop (remember to disable the Wi-Fi)
- Nyx300
- Ethernet cable (this will come in the box)
- Power Adapter (this will come in the box)

**NOTE:** If you are using a Laptop or PC and do not have the **Ethernet Port** you will have to connect the PC or Laptop via wireless. All you have to do is the following.

- Turn ON the Wireless or Wi-Fi on the Laptop or PC.
- Search for networks in the vicinity
- You will see the name of the **SSID** provided by the Nyx300. This will be something like **Nexxt XXXXXX** (where the Xs are the last 5 to 6 digits of the MAC Address of the

Nyx300) To be sure which it is, take the Nyx300 in your hand and turned over and you will see an orange sticker that will contain information about the Nyx300. Look for the MAC Address.

- Choose the network, and connect the PC or Laptop to it and you are done.

### Steps:

1. Connect the power adapter to the Nyx300. This will turn On the device.
2. Press the RESET/RST button for 20 seconds. This will reset the Nyx300 in case you have done any changes and you didn't notice.
3. Take the Ethernet cable in your hand, one end of the cable goes to the **LAN Port #1** in the Nyx300 and the other end goes to the **Ethernet Port** on the PC or Laptop.
4. Once you are connected either Wi-Fi or Ethernet, open your browser and type the IP Address **192.168.0.1** press the key ENTER.




5. If you have done all the steps correctly, you will get a prompt windows asking you to sign in by typing the **Username and Password** so proceed to type **admin** in both fields. This information also appears in the guide and below the Nyx300.



6. Once you pass the sign in prompt you will see the configuration website.

Language: English ▾

Advanced: 



Access Point (AP)



Router



Repeater

Network Name (SSID):

Key Value:

Connection Type:  Fixed IP  Auto Config. (DHCP)  PPPoE Dial-Up

Host Name:

MAC Address Clone:  (XX:XX:XX:XX:XX:XX)

7. Once inside you will choose the option **Router** below that, you will be able to change the **Network Name (SSID)** and the default password in **Passphrase**. Once you have added the password, press the **Save/Apply** button and the settings will be done.

8. All you have to do now is connect the cable from the main router or modem to the **WAN** port in the Nyx300.

Nyx300: Configuración Inalámbrica



**NNOTA:** Su nuevo enrutador es compatible con cualquier sistema operativo, solo requiere un navegador para acceder al sitio web de configuración. (IE, Firefox, Opera, Chrome, Safari, etc.).





Recomendaciones: Recomendamos trabajar con el Nyx300 autónomo. Esto se debe a que a veces la PC o computadora portátil están conectadas a una señal inalámbrica o a través de una LAN al enrutador principal o al módem. Si está utilizando una computadora portátil o una PC con señal de Wi-Fi, desactive la conexión Wi-Fi o desactívela. Este artículo configurará Nyx300 a través de un cable Ethernet.

**Requirimientos:**

- PC o computadora portátil (recuerde deshabilitar el Wi-Fi)
- Nyx300
- Cable de Ethernet (esto vendrá en la caja)
- Adaptador de corriente (esto vendrá en la caja)

**NOTA:** Si está utilizando un ordenador portátil o una PC y no tiene el **Puerto Ethernet**, deberá conectar la PC o el ordenador portátil a través de la conexión inalámbrica. Todo lo que tienes que hacer es lo siguiente.

- Encienda la red inalámbrica o Wi-Fi en la computadora portátil o PC.
- Buscar redes en los alrededores
- Verá el nombre del **SSID** provisto por Nyx300. Esto será algo así como **Nexxt XXXXXX** (donde las X son los últimos 5 a 6 dígitos de la dirección MAC de la Nyx300) Para estar seguro de cuál es, toma la Nyx300 en tu mano y dale la vuelta, y verás una pegatina naranja que contendrá información sobre el Nyx300. Busque la dirección MAC.
- Elija la red y conéctela a la PC o computadora portátil y listo.

### **Pasos:**

1. Conecte el adaptador de corriente al Nyx300. Esto encenderá el dispositivo.
2. Presione el botón RESET / RST durante 20 segundos. Esto restablecerá Nyx300 en caso de que haya realizado algún cambio y no lo haya notado.
3. Tome el cable Ethernet en su mano, un extremo del cable va al puerto **LAN # 1** en el Nyx300 y el otro extremo al **Puerto Ethernet** en la PC o computadora portátil.
4. Una vez que esté conectado a Wi-Fi o Ethernet, abra su navegador y escriba la dirección IP **192.168.0.1** presione la tecla **ENTER**.




5. Si realizo todos los pasos correctamente, podrá ver una ventana emergente el cual le pedirá colocar usuario y contraseña **Username and Password** proceda a colocar **admin** en ambos campos. Esta información también la podrá encontrar en la guía y en la etiqueta debajo del Nyx300.

 A screenshot of a web browser displaying a "Sign in" page. At the top, it says "Sign in" and "http://192.168.0.1". Below that, a warning message reads "Your connection to this site is not private". There are two input fields: "Username" and "Password". At the bottom right, there are two buttons: a blue "Sign in" button and a white "Cancel" button.

6. Una vez pase esta parte, podrá ver la página de configuración.

Language: English ▾

Advanced: 



Access Point (AP)



Router



Repeater

Network Name (SSID):   
Key Value:

Connection Type:  Fixed IP  Auto Config. (DHCP)  PPPoE Dial-Up

Host Name:

MAC Address Clone:  (XX:XX:XX:XX:XX:XX)

7. Una vez dentro seleccione la opción **Router** y debajo podrá encontrar los campos **Network Name (SSID)** donde puede cambiar el nombre de la red inalámbrica si usted gusta, y colocar contraseña en el campo **Passphrase**.

8. Una vez realizado los cambios deseados presione el botón de **Save/Apply** para guardar la configuración.